

## AirCross 2 Camera Compatibility List

Brand	Model	Connection type	Cable	TCP	Shutter	Record	ISO	TV	AV	Auto Focus	Electronic Focus	Power Supply		
CANON	EOS R	M3C-USB	M3C-C	USB	✓	✓	✓	✓	✓	✓	✓	—		
	EOS RP				✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 6D Mark II		M3C-Mini		M3C-Micro	✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 6D					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 60D					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 77D					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 80D					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 5D2					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 5D3					✱	✓	✓	✓	✓	✓	✓	✓	—
	EOS 800D					✱	✓	—	✓	✓	✓	✓	✓	✓
	EOS 5D Mark IV		✱			✓	✓	✓	✓	✓	✓	✓	✓	—
	EOS 200D II		✱			✓	✓	✓	✓	✓	✓	✓	✓	—
EOS M50	✓	✓	✓	✓	✓	✓	✓	✓	✓	—				
EOS M5	MCSC-C1	MCSC-C1	Shutter Protocol	✓	—	—	—	—	—	—	—			
SONY	Alpha 7S	M3C-USB	M3C-Micro	USB	—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7R				—	✓	✓	✓	✓	✓	—	—	✓	
	Alpha 6300				—	✓	✓	✓	✓	✓	✓	—	✓	
	Alpha 6400				—	✓	✓	✓	✓	✓	✓	✓	✓	
	Alpha 6500				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	Alpha 7S II				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	Alpha 7R II				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	Alpha 7 II				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	Alpha 7 III				—	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Alpha 7R III				—	✓	✓	✓	✓	✓	✓	✓	✓	✓
	DSC-RX100M3				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	DSC-RX100M4				—	✓	✓	✓	✓	✓	✓	✓	—	✓
	DSC-RX100M5				—	✓	✓	✓	✓	✓	✓	✓	—	✓
SONY	Alpha 7S	MCSC-Multi	MCSC-Multi	Multi	✓	✓	—	—	—	✓	—	✓		
	Alpha 7R	✓	✓		—	—	—	✓	—	—	✓			
	Alpha 6300	MCSC-Multi/C	MCSC-Multi/C		✓	✓	—	—	—	✓	—	✓		
	Alpha 6400				✓	✓	—	—	—	✓	—	✓		
	Alpha 6500				✓	✓	—	—	—	✓	—	✓		
	Alpha 7S II				✓	✓	—	—	—	✓	—	✓		
	Alpha 7R II				✓	✓	—	—	—	✓	—	✓		
	Alpha 7 II				✓	✓	—	—	—	✓	—	✓		
	Alpha 7 III				✓	✓	—	—	—	✓	—	✓		
	Alpha 7R III				✓	✓	—	—	—	✓	—	✓		
	Alpha 9				✓	✓	—	—	—	✓	—	✓		
	DSC-RX100M3				✓	✓	—	—	—	✓	—	✓		
	DSC-RX100M4				✓	✓	—	—	—	✓	—	✓		
DSC-RX100M5	✓			✓	—	—	—	✓	—	✓				
Panasonicic	DMC-G7KGK	MCSC-Remote	MCSC-Remote	MCSC-Remote	✓	✓	—	—	—	✓	—	—		
	DMC-G85GK				✓	✓	—	—	—	✓	—	—		
	DMC-GH3				✓	✓	—	—	—	✓	—	—		
	Lumix GH4				✓	✓	—	—	—	✓	—	—		
	DC-S1GK-K				✓	✓	—	—	—	✓	—	—		
	Lumix GH5	M3C-USB	M3C-C	USB	✓	✓	✓	✓	✓	✓	—			
	DC- GHSSGK-K	✓	✓	✓	✓	✓	✓	✓	✓	—				
Nikon	Z6	M3C-USB	M3C-C	USB	✓	✓	✓	✓	✓	✓	✓	—		
	Z7		✓		✓	✓	✓	✓	✓	✓	—			
	D850		M3C-Micro		✓	✓	✓	✓	✓	✓	✓	—		
	D800				—	—	—	—	—	—	—	—		
FUJIFILM	X-T2	MCSC-C1	MCSC-C1	Fuji Shutter	✓	✓	—	—	—	✓	—	—		
	X-T3				✓	✓	—	—	—	✓	—	—		
	X-T20				✓	✓	—	—	—	✓	—	—		
	X-T30				✓	✓	—	—	—	✓	—	—		

\* Indicates that the Canon SLR camera is recommended to take the camera in MF mode. If the camera is shot in AF mode, there will be a low probability of focus failure and jam.

Note

The power is turned off in the Sony camera's internal settings, and the gimbal still supplies power to the camera. If this is the case, switch the wire selection (Multi ↔ Multi/C) on the gimbal to switch whether or not to power the camera.

Whether it is a Micro cable or a Multi/C cable, When connecting the camera, if it appears, please check the connected device prompt. The solution is to restart the stabilizer and reconnect it once.

These three Sony models can achieve electronic focus: Alpha 7 III, Alpha 7R III, Alpha 6400, If you can't make electronic focus, you can try the lens to be in AF mode, but the camera needs to be set to MF mode.



